


HARDWARE INSTALLATION INSTRUCTIONS

Two Piece ASP Proximity Readers Extended & Long Range

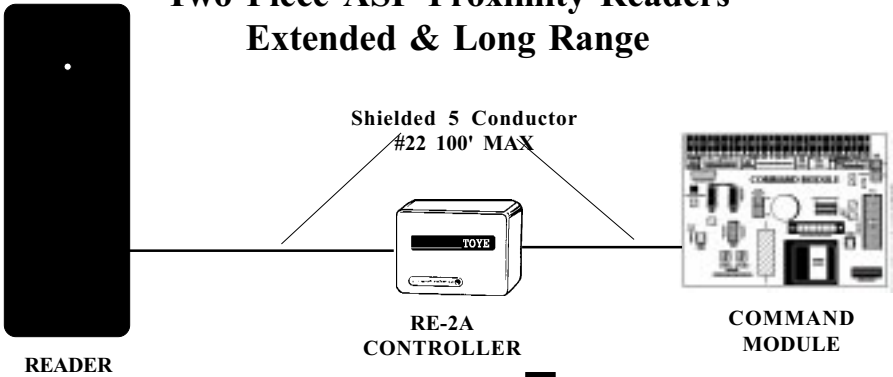

General

These readers are suitable for both indoor and outdoor environments.

They must be mounted away from metal as illustrated.

The reader should be mounted away from any broad spectrum EMI noise sources, and at least 7" from the Controller. Avoid close installation near CRT's, motors, generators, and walls that may contain steel reinforcing materials.

