

TOYECORPORATION TOYE

ACCESS CONTROL SYSTEMS

P.O. Box 3997, Chatsworth, CA 91313-3997, Phone (818)-882-4000, Fax (818)-882-5325, www.toyecorp.com

New Toye Universal Command Modules

The new universal command modules work with most Wiegand formats automatically, without any programming or special EPROM's. They also can learn up to 16 site codes in the field. These features allow the Toye dealer to stock one command module and use it on most Toye systems without having to order a custom EPROM from the factory.

How to Learn a Site Code

1. To clear all existing site codes, set Dipswitch #7 to the ON position and cycle the input power to the Command Module.
2. To enroll a site code, set Dipswitch #7 in the ON position, and then present a proximity card, or swipe a magnetic [or barcode] card.
3. The reader LED will flash four times to indicate successful enrollment.
4. If the site code has already been enrolled, the reader will still flash four times, but will not use up another site code placeholder.
5. If sixteen unique site codes have already been learned, then the LED will flash only once.
6. Be sure to set Dipswitch #7 to the OFF position for normal reader operation.
7. The Supervisor First Option is not available in the Universal Command module. If this feature is required, a regular command module must be ordered.

How to Order

1. Suffix "L" to the model number, i.e. 4120-L, 4122-L, 4122-XL.
2. Suffix the L.E.D. control option. For old readers with single line L.E.D. control, suffix FLS. For newer systems with readers with dual L.E.D. control suffix RGN, i.e. 4120-L-RGN.